

GU-819-A A-Screen Screw
GU-819-R R-Screen Screw

GU-818-40 Filter Screen, 40 Mesh
GU-818-60 Filter Screen, 60 Mesh
GU-818-80 Filter Screen, 80 Mesh

GU-04007
 Screen Screw Seal

OR-801A
 O-Ring

OR-800
 Back-up Ring

OR-00043B
 O-Ring

SP-04005
 Spring

GU-817-90 Side Seal
GU-817-90D Side Seal, Delrin
GU-817-180 Side Seal, #3 #4

GU-816 Gun Block
GU-816S Gun Block Steel

GU-836
 Side Mount Retaining Ring

TN-04186
 Grease Fitting

GU-837
 Retainer Ring Split-Set

OR-00042A
 O-Ring

GU-830
 Air Cylinder Bushing

GU-812
 Lock Collar

GU-802
 Piston

GU-807
 Two Position Stop

OR-00026A
 O-Ring

GU-804
 Lock Knob

GU-831
 Retaining Screw

GU-806
 Spring

GU-803
 Cylinder End Cap

OR-00043B
 O-Ring

OR-00026A
 O-Ring

OR-00043B
 O-Ring

GU-801
 Air Cylinder

OR-00037B
 O-Ring

GU-829
 A/P Check Valve

OR-804
 O-Ring

OR-803
 O-Ring

OR-00002A
 O-Ring

GU-824
 Spool Valve Spring

GU-04019
 Air Hose
 (Not to scale)

GU-833
 Hose Adapter

OR-803
 O-Ring

GU-823
 Spool Valve

GU-825-1
 Spool Valve Liner

GU-825-2
 Liner Bushing

GU-826
 Air Manifold

GU-831
 Retaining Screw

GU-827-1
 Gun Handle

GU-828
 Trigger

RA-00005A
 A-Side Fitting

TN-04190
 Shoulder Bolt

TN-04191
 Nut

GU-808
 Shoulder Bolt

GU-852
 Check Valve Spring

GU-853
 Check Valve Ball

GU-851
 Check Valve Seat

OR-805
 O-Ring

GU-808
 Shoulder Bolt

GU-842
 Head Latch

OR-805
 O-Ring

RA-00006A
 R-Side Fitting

GU-04001-01
 Coupling Block Body

TN-04192
 Plug

TN-04193 Small Mounting Bolt
TN-04197 Large Mounting Bolt

GU-023
 Manual Valve Seat

GU-022
 Manual Valve Housing

OR-015
 O-Ring

OR-016
 Back-up Ring

GU-021
 Manual Valve Stem

GU-023
 Manual Valve Seat

GU-022
 Manual Valve Housing

OR-015
 O-Ring

OR-016
 Back-up Ring

GU-021
 Manual Valve Stem

AP-2 Spray and Pour Gun

See Gun Manual for complete parts list.

